

Scene Control Module  
Owner's Guide  
February, 2005

Your coach has been equipped with an advanced electrical system that allows you to choose up to four “scenes” of lighting with the press of one of the scene buttons. A scene is the setting of brightness levels of a number of lights in a group. These scenes can be the lighting desired for certain activities such as dinner, watching TV, playing games, night lighting, etc. When a particular scene button is pressed, the brightness of the individual lights within a group will automatically be set to preset levels. The lights in a group can be turned on and off or dimmed individually by pressing their appropriate buttons.

One of the scenes typically set at the factory is an “all on” setting. When this scene button is pressed, all the lights in the group will come on at full brilliance. To change this setting to a desired scene, adjust each of the lights in the group to the desired level (any level from full brilliance to off) with the individual light buttons. Once the desired scene is set, press and hold the scene button until the lights of the group blink on for about a second and then off for about a second and then return to the set levels (about three seconds). This scene is now set and can be retrieved by simply pressing and releasing the scene button. This procedure is similar to setting the radio station buttons on your car radio.

Using the same procedure, the other three scenes can be set. These scenes will be remembered by the system even when the battery is disconnected. They can be changed at any time to a more desirable set of brightnesses.

To determine which lights are included in the scene group, press and hold a scene button for three seconds to (as setting a new scene) and watch which lights blink and then off. These are the ones included in the scene group.